


# **Greenhouse 05**

## **Glazing Instructions**

### **Standard or Toughened Glass**

### **6'x8', 6'x6' and 6'x4'**

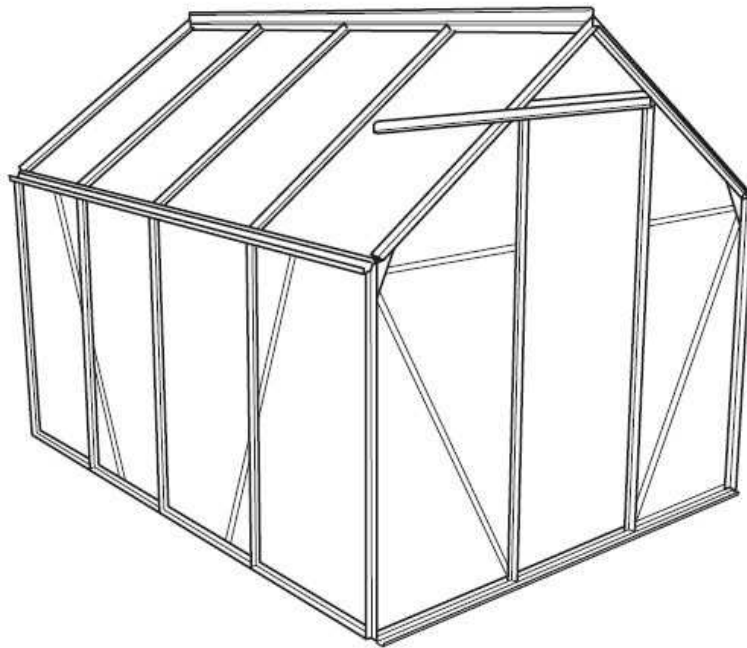


#### **IMPORTANT**

Please read the instructions completely before starting assembly


Summer Garden Buildings does not guarantee that this is the most recent version of these instructions or that all data has been accurately reproduced. You are advised to refer to the instructions supplied with the product before assembly. If for any reason the instructions are not delivered with the product you are advised to obtain the most recent version before assembly. No guarantee is given regarding the accuracy of these instructions and no liability will be accepted for any errors or inaccuracies.




## GLAZING PLANS

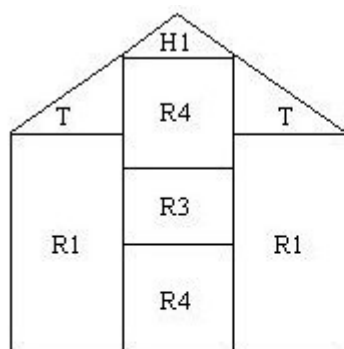


Front

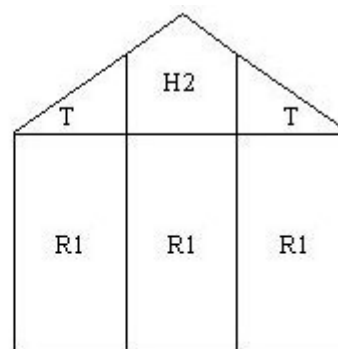


Rear

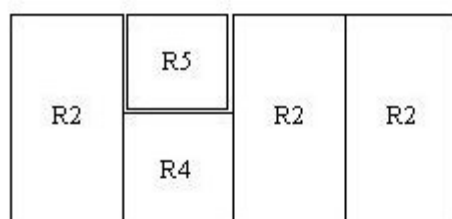


Roof 6x8

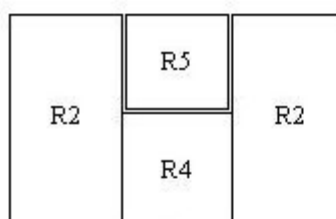


Roof 6x6

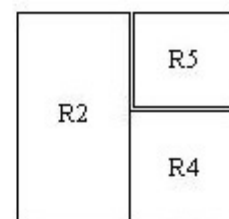


Roof 6x4

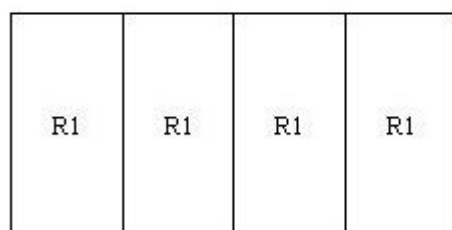

Sides 6x8

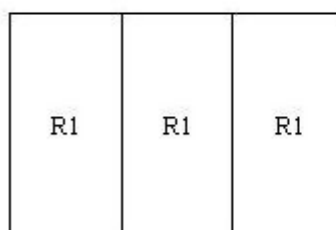

Sides 6x6

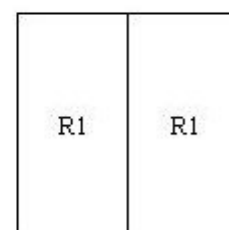

Sides 6x4

## PARTS LIST

Code	Description	Size 6' x 8'	Size 6' x 6'	Size 6' x 4'
R1	Walls	13	11	9
R2	Roof large	6	4	2
R3	Door middle	1	1	1
R4	Door large / roof small	4	4	4
R5	Roof vent	2	2	2
T	Front and rear triangles	4	4	4
H1	Front apex	1	1	1
H2	Rear apex	1	1	1
	Number of glass panes	32	28	24
	Number of Z clips	12	12	12

## BEFORE YOU START

- This task is accomplished more easily with two people.
- Gloves and goggles are recommended. No tools are required.
- Identify all glass panels.
- Locate the Z-clips, supplied separately.
- Locate the W-clips from the greenhouse pack.

## USING THE W-CLIPS TO SECURE THE GLAZING

- The glazing is fixed with wire spring clips, also known as W-clips because of their shape.
- Once the glazing is in place, secure it with the W-clips as shown in the photograph.
- Use three W-clips to each side of the largest panels and two for smaller panels.
- The small panel in the middle of the door requires only one W-clip each side.
- The W-clips should be a tight fit so a little pressure may be required to fix them in place.
- The appearance will be neater if the W-clips are evenly spaced and symmetrical.



## USING THE Z-CLIPS TO OVERLAP THE GLAZING

- Two Z-clips are required between the higher and lower glazing at the front and rear.
- First, slot the Z-clips over the top of the lower glazing panels.
- Next, the higher glazing panels can be lowered onto the Z-clips.
- Once the glass panels are in place, secure them with W-clips

## GLAZING THE ROOF VENT

- The roof vent should be glazed during installation.
- For further details please refer to the separate greenhouse erection instructions.